 
 
## Safety Information



• Do not bump, apply excessive stress or scratch the lamp, as the lamp is glass product filled with high pressure gas (otherwise it could cause an injury from lamp breakage)





• Do not operate the lamp in close proximity to paper, cloth or any other combustible material during lamp operation or until the lamp properly cooled down after the lamp is turned off (otherwise it could cause a fire).



• Transport, store and dispose of lamps (including used lamps) in original packaging and the protective over if attached (otherwise it could cause an injury from lamp breakage) injury from lamp breakage).

 
• Wear a protective covering for the face and neck, and long sleeves when installing or removing the lamp to or from equipment(otherwise it could



• Turn off the power supply to the lamp when installing or removing the lamp to or from equipment (otherwise it could cause an electric shock).



• Do not look directly or indirectly at the light from the lamp without adequate eye protection (otherwise it could cause eye pain or damage to vision)



• Use the lamp only in equipment for which approved, and only after reading and understanding the operating manual for such equipment. Do not

 
make any other use of the lamp (otherwise it could cause lamp breakage or damage to the equipment) • Do not touch quartz envelope with bare hands. If quartz envelope is dirty, wipe with alcohol-soaked clean cloth (otherwise it could cause lamp

 


breakage or shorten lamp life)

Do not subject the lamp to vibration or shock(otherwise it could cause lamp breakage or shorten lamp life).


- Do not throw away the original packaging and the protective cover if attached, as they will be needed in transporting or disposing of the lamp.
- Store the lamp in its original protective packaging and the protective cover if attached
- Transport the lamp In its original protective packaging and the protective cover if attached (otherwise it could cause lamp breakage)







 • Install the lamp properly in the equipment, without twisting, bending or otherwise applying excessive stress to the lamp (otherwise it could cause lamp breakage, failure of the lamp to remain in place, or shorten lamp life)



- Either leave the protective cover is attached, on the lamp during installation and remove it when installation is complete, or remove the protective cover immediately prior to installation.
- Use proper care in installing or removing the lamp to avoid bumping the lamp against anything (otherwise it could cause lamp breakage or damage
- Place the protective cover if attached, on the lamp immediately before or after removal of the lamp.



Do not use where volatiles are present (otherwise it could cause fire or explosion)

• When a lamp has been used for longer than its rated life, it must be replaced. The risk of lamp breakage increases (otherwise it could cause lamp breakage)



On disposal, inform the recycler that the lamp is filled with high pressure gas.

# **USHIO**

#### ■ USHIO AMERICA, INC.

5440 Cerritos Avenue, Cypress, CA 90630, U.S.A. TEL +1 714-236-8600 FAX +1 714-229-3180 URL www.ushio.com

### ■ USHIO EUROPE B.V.

Breguetlaan 16-18, 1438 BC Oude Meer, the

TEL +31 20-446-9333 FAX +31 20-446-0360 URL www.ushio.eu/

### ■ USHIO ASIA PACIFIC PTE. LTD.

28 Genting Lane, #05-05, Platinum 28, Singapore 349585

TEL +65 6274-5311 FAX +65 6274-5300 URL www.ushioasiapacific.com/

#### ■ USHIO ASIA PACIFIC (THAILAND) LTD.

202 The Le Concorde Tower, 20th Floor, Room No.2006, Ratchadapisek Road, Huaykwang, Bangkok 10320 Thailand TEL +66 2-694-1440 FAX +66 2-694-1770

#### ■ USHIO TAIWAN, INC.

Gangnam-daero

URL www.ushio.co.kr/

8F, No.4, Sec.1, Zhongxiao W.Rd., Taipei 10041, Hang Seng Bank Tower, 10/F, 1000 Lujiazui Ring Road, Pudong New Area, Shanghai, 200120, TEL +886-2-2312-3358 FAX +886-2-2312-3858

TEL +86 21-6841-1135 FAX +86 21-6841-1150 URL www.ushio.com.tw/ URL www.ushio.com.cn/

### ■ USHIO KOREA, INC. (Seocho-dong, Deokheung Bldg), 14F, 363,

Seocho-gu, Seoul, 137-858 Rep. of Korea

TEL +82 2-587-1115 FAX +82 2-587-1118

URL www.ushioasiapacific.com/

■ USHIO SHENZHEN, INC. SuitesA, E, 10/F, Building A, Honglong Century Plaza, NO.3001, HePing Road, LuoHu District, ShenZhen, 518001 P.R.C. TEL +86 755-8207-0162

1604K(2)

FAX +86 755-8207-0161 URL www.ushio.com.cn/

■ USHIO HONG KONG LTD.

URL www.ushio.com.hk

■ USHIO SHANGHAI, INC.

Suites 3113-14, 31/F, Tower 6, The Gateway, 9

TEL +852 2756-7880 FAX +852 2798-9861

Canton Road, Tsim Sha Tsui, Kowloon, Hong Kong

The specifications on this sheet supercede all previously published specifications and may be subject to change for design and specification improvement without prior notice

# USHIO Xenon Lamp

UXL-300D-

**Specification Sheet** 



## Features & Benefits

- Enhanced electrodes design for precise positioning and high arc stability.
- Improved manufacturing process enables extended life.
- USHIO developed product with tightly controlled ISO quality processes.

## Applications

- Spectroscopic Analysis
- Microscopy
- Solar Simulator
- Boroscopy
- Machine Vision

# USHIO

# UXL-300D-O

## Model

UXL-300D-O

## Initial Specifications

Wattage Power Range	W	300
Rated Lamp Current	Α	15
Operating Voltage **3	V	20±2
Useful Power Range	Α	14~16

 $\ensuremath{\%3}$  As the arc gap increases by electrode evaporation, lamp voltage increases.


## Specifications

Cold Arc Gap	mm	2.6
Weight	g	73
Spectral Type	_	Ozon Free
Avg Rated Life **4	h	1000

\*\*4 Be sure to replace the lamp at the rated lamp life. Otherwise it could cause an injury if it bursts. Average rated life: represents the average life span when lit continuously at the rated power. The average rated life terminates then either ① or ② takes place. ① When the horizontal irradiance or total luminous flux are reduced to 70% of the initial values. ② When lighting is

# Intensity (Representative Values)

Horizontal Candle Power	cd	660
Total Luminous Flux	lm	9500
Color Temperature	K	6000

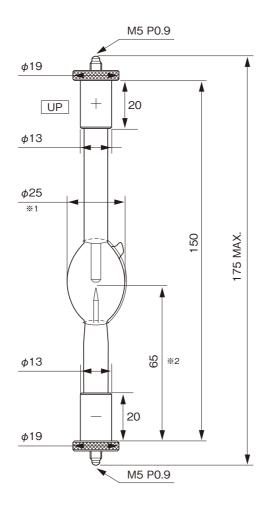

%1 Diameter excludes height of protuberance on lamp bulb.
%2 Length to the center of the cold arc gap

# Operating Condition \*5

### ☐ Power Supply


Power Supply	Constant Power Control (suggested)	
Current Ripple	P-P, %MAX	3
Trigger Voltage **6	Min, kV AC	35
Supply Voltage **7	Min, V	120

### ☐ Lamp House

Lamp nouse		
Position	٥	Vertical ±15
		Horizontal ±15
Base Temprature	°C, MAX	200
Forced Cooling **8	Necessaly	


- %5 Use in well-designed and power supply. Otherwise it may cause lamp bursts or shorten life.
- \*\*6 Voltage to ignite lamp. Exhausted lamp needs higher voltage to be ignited as electrodes evaporation.
- $\ensuremath{\%7}$  Open circuit voltage to light the lamp.
- %8 Ensure that the lamp house air is properly exhausted.

# Lamp Life Curve (Typical Value) \*9

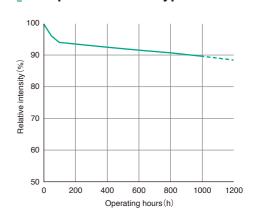

※9 Horizontal luminous intensity at continuous use. Frequent switch may cause shorter life.

## Spectral Distribution \*10

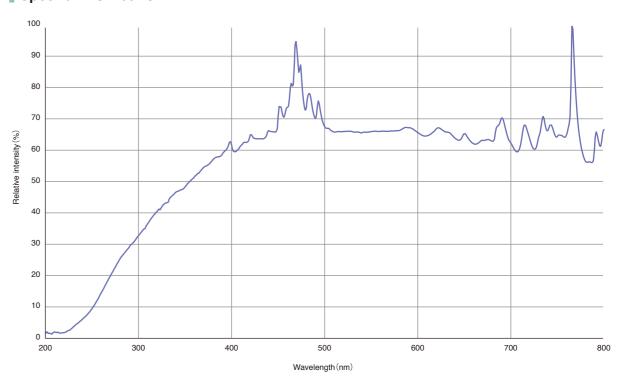

%10 Reference value at horizontal measurement.